


NOTE: BALLAST PUMPS ARE REVERSIBLE. INTAKE AND OUTLET ARE THE SAME ON HULL BOTTOM. THROUGH HULL FITTINGS ON HULL SIDE ARE BALLAST TANK VENT LOCATIONS.

Cobalt R4 SURF

PORT VIEW

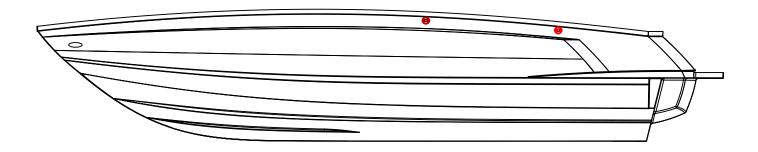

STBD VIEW

